


The hydraulic jack is shipped with a plastic insert which holds the jack handle mechanism down.

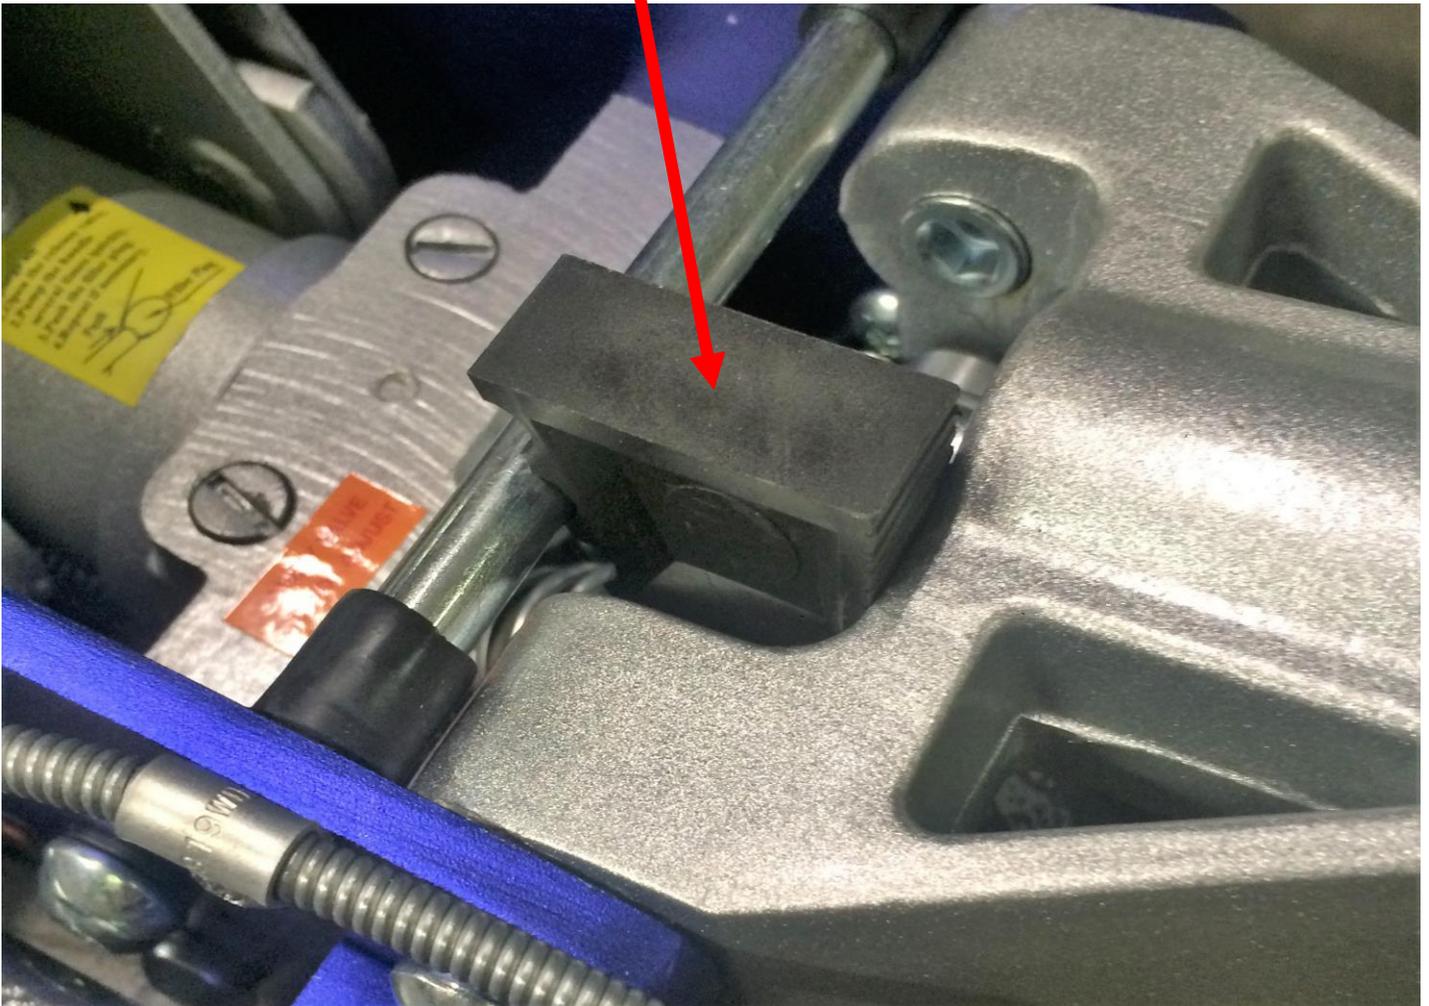

Insert round jack handle into mechanism and push down firmly. Remove plastic insert.