

Minimax Aircraft Tugs

Wheel Weight Installation Instructions



Wheel weight hub parts.



Install weight hub onto wheel. (May require tapping with a rubber mallet or wood block with hammer.) Align hub bolt holes with wheel bolt holes. Align holes with axle hole. Install 1/4" x 2" bolt and lock nut. Tighten securely.



Slide weight onto installed weight hub.

Install shaft collar onto weight hub. Press weight firmly against tire. Secure shaft collar using a 3/16" Allen wrench tightening set screws securely.

NOTE: This product does NOT fit tires with chains installed.